Project:	
Type:	
Description:	

MOOD PRO ADJUSTABLE LARGE 4.5"

INDOOR - RECESSED



Mood Pro Adjustable Round Trim



Mood Pro Adjustable Round Trimless



Mood Pro Adjustable Square



Mood Pro Adjustable Square Trimless











625 Jersey Avenue, Unit 7 - New Brunswick New Jersey, 08901 USA



Round: ø4.76" | 121mm Square: 4.76"x4.76" | 121x121mm



Finishes

12 Textured matte white

Textured matte black

0.07"-0.98" | 2-25mm Max Ceiling Thickness



Mood Pro Adjustable Round Trim Cone



Mood Pro Adjustable Round Trimless Cone



Mood Pro Adjustable Square Trim Pyramid



Mood Pro Adjustable Square Trimless Pyramid

LIGHT ENGINE

Example:

A.GP15B.HW12



. **GP1** Round Trim LP1 Round Trimless

HP1 Round Trim Cone KP1 Round Trimless Cone

MP1 Square Trim

QP1 Square Trimless Pyramid

LED Wattage

21W 27° Medium 34° Wide

Optics 12° Narrow

30° Wide for DT

ССТ 21W нw 2700K CRI > 90 lm 2528 HQ 3000K CRI > 90 lm 2648 WQ 3500K CRI >90 lm 2750

HN 4000K CRI > 90 lm 2846 DT1 1800-3000K CRI > 95 lm 47-2015

Lumens shown above are source. For delivered lumens, refer to last page Lumen maintenance: L90 B10 = 50,000h (DT L(80 B10 = 50,000h)

Lights

PP1 Square Trimless NP1 Square Trim Pyramid

NOTES

- Warm Dim fixtures are 21W and 30° (A.GP15E.DT _ _) on request
- Consult factory for lead time and pricing
- For alternate ceiling thickness consult factory
- Special finishes (on request)

HOUSING/DRIVER (RETROFIT OPTIONS ARE AVAILABLE, CONSULT FACTORY)

Example:

G.OMOODL.C.0600

_	
G	

Housing/Driver Location

Plate Current Setting

Universal Driver 0-10V / Triac / ELV

Dimming

New construction housing Remote/Semi-Remote Driver

MOODL

. <u>c</u> Round plate

. 0600 21W

IC/AT/CP Housing with
Remote Driver

Square plate

 $(A.EM.MOOD.L000)\,Emergency\,on\,request$



Project:	
Type:	
Description:	

MOOD PRO ADJUSTABLE LARGE 4.5"

INDOOR - RECESSED

Technical Info

Housing/Driver:

Driver can be located fully remote driver adjacent to fix ture in plenum (depending and depending and depending all depending and depending are depended as a fixed part of the depending and depending are depended as a fixed part of the depending and depending are depended as a fixed part of the depending are depended as a fixed part of the depending are depended as a fixed part of the depending are depended as a fixed part of the dependency and depending are depended as a fixed part of the dependency and dependency are depended as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency are dependency as a fixed part of the dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency are dependency as a fixed part of the dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependency are dependency as a fixed part of the dependency and dependencyon the driver selected) and is provided with an new construction housing for mounting. Optional additional IC/AT/CP housing with remote driver.

Optical features Light source features:

1 LED/3step/50,000 hrs Beam angles: 12°, 27°, 30°, 34° No interchangable optics

Physical features:

Material: Die-cast aluminum Mountings: Recessed Surfaces: Ceiling Weight: 1.20lbs

Max Remote Driver Distance:

60 Ft. 18 Ga 80 Ft, 16 Ga 100 Ft, 14 Ga

Luminaire Description:

Trim Features: LED and heat sink assembly are followed by an optical reflector determining beam degree, and available accessories. Plate is included with trim. Trim Benefits: Available in trimless and visible trim, round and square.

Max Fixture Total Wattage: 21W;


Warranty: 5 Year LED warranty.

ETL listed, Union assembled

Reggiani reserves the right to change details at any time.

Rev 08/02/2024

Technical Drawings

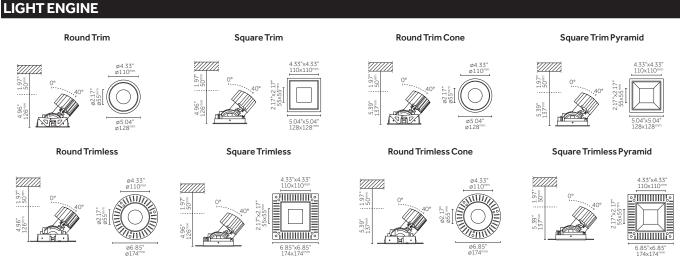


HOUSING/DRIVER

New Construction Housing


- 1. Requires 1/2" clearance from building members, 3" clearance from any insulation
- $2. \ \ Where no \, minimum \, in stall \, height \, indicated, \, minimum \, height \, is$ the trim height plus 1/2"
- 3. Hanger bars install on all 4 sides, expand from 13.5" to 24'
- 4. Hanger brackets accept FB bars, C-Channel, and 1/2" conduit
- $5. \ \ Non \, electrical \, housings \, allow \, fixture \, positioning \, for \, post \, ceiling$ installation.

IC/AT/CP Housing Large

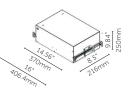

- 1. Requires 1/2" clearance from building members
- 2. Hanger bars expand from 13.5" to 24", add 3.75" to the basic dimension of the housing
- 3. Hanger brackets accept FB bars, C-Channel, and 1/2" conduit for mounting

Remote Driver

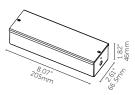

- 1. Must be installed in an accessible serviceable location with maximum 90 degrees Fahrenheit temperature.
- 2. Requires 3" clearance from any insulation



Project:	
Type:	
Description:	

MOOD PRO ADJUSTABLE LARGE 4.5"

INDOOR - RECESSED

Optics accessories



Description

Wide texture honeycomb louvre

0.26007.0000



Description

Dense texture honeycomb louvre



Code



Description

Colored glass filter 1 mm

Colour: **4A** Red

7A Pink 5A Green 8A Yellow **6A** Blue 9A Orange

Code 0.26074.004A 0.26074.005A 0.26074.006A 0.26074.006A 0.26074.008A 0.26074.009A



Description

Selective filter

6B 2700K - 2200K

Kelvin: 4B 3000K - 2700K **7B** 2700K - 2000K 5B 2700K - 2500K 8B 3000K - 3500K

0.26074.005B 0.26074.006B 0.26074.006B 0.26076.008B 9B 3000K - 4000K 0.26076.009B

0.26074.004B

Plate accessories



Description

Code 0.26006.0000

Description

Honeycomb louvre for plate

Code 0.26032.0000



Description

Elliptical beam lens, Damp

Transparent glass, Damp

Code 0.26025.0000



Description

Spread lens, Damp

Code 0.26073.0000



Opallens, Damp

Description

Code

Code

Code

Code

0.26028.0000



Description

Snoot (for round) 0.26216.0000

Description

0.26232.0000

Snoot (for square)



Description

(for round)

Snoot with diffusive lens Damp

Code 0.26219.0000



(for square)



Code 0.26235.0000

Code

Plate

Curve round plate



Description

0.26002.0012 Curve round plate 0.26002.0031

Finishes:

12 Textured matte white / 31 Textured matte black

Damp



Description

0.26240.0012 Flush round plate Damp 0.26240.0031

12 Textured matte white / 31 Textured matte black



Description

0.26241.0012 Cone round plate Damp 0.26241.0031

Finishes:

12 Textured matte white / 31 Textured matte black



Description

Code 0.26246.0012 Curve round plate Damp 0.26246.0031

Finishes:

12 Textured matte white / 31 Textured matte black

Curve square plate



Description Curve square plate

0.26003.0012 0.26003.0031

Code

Finishes: 12 Textured matte white / 31 Textured matte black

Damp



Description Flush square plate Damp Code 0.26245.0012 0.26245.0031

Code

Description

12 Textured matte white / 31 Textured matte black



Pyramid square plate Damp

0.26244.0012 0.26244.0031

Finishes:

12 Textured matte white / 31 Textured matte black



Description

Code 0.26243.0012 Curve square plate Damp 0.26243.0031

Finishes:

12 Textured matte white / 31 Textured matte black


2 YEAR WARRANTY





Example:

G.OMOODL.C.0600

Constant Current LED Drivers for Mood Pro L

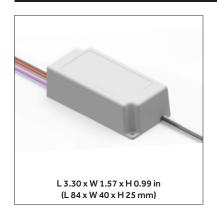

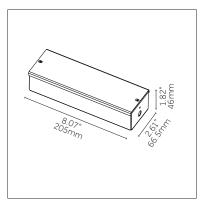

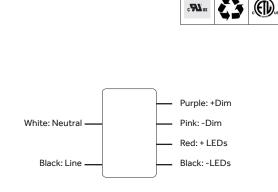

Nominal Input Voltage	Max. Output Power	Output Voltage	Output Current	Efficiency	Max. Case Temperature	THD	Power Factor	Dimming Method	Dimming Range	Startup Time
120 to 277 Vac, 47 - 63 Hz	26 W	24 to 42 Vdc	620 mA CC	up to 87% typical	90°C (measured at the hot spot)	< 20%	> 0.9	Forward-Phase, Reverse-Phase & 0 - 10V	1 - 100% (% of lout)	300 ms typical

FEATURES

- $\bullet \ \ Compatible \ with TRIAC \ (forward-phase \ or \ leading-edge), ELV \ (reverse-phase \ or \ trailing-edge) \ and \ 0-10 \ V \ dimmers$
- $\bullet\,$ TRIAC and ELV dimming only at 120 Vac.
- Lifetime: 50,000 hours min at 70°C case temperature
- $\bullet \ \ \text{Protections: output open load, over-current and short-circuit (hiccup), and over-temperature with auto recovery } \\$
- Conducted and radiated EMI: Compliant with FCC CFR Title 47 Part 15 Class B (120 Vac)/Class A (277 Vac) and EN55015 (CISPR 15) at 220/230/240 Vac
- $\bullet \ \ Complies \ with \ ENERGY\ STAR^o\ luminaire\ specification\ and\ DLC\ (Design Light\ Consortium^o)\ technical\ requirements$
- IP64-rated case with silicone-based potting.
- 90°C maximum case hot spot temperature
- UL8750 recognized Class 2
- CAN/CSA C22.2 No. 250.13-14 LED equipment for lighting applications

APPLICATIONS

- Downlights
- Commercial & Residential lighting
- Architectural lighting

COMPATIBLE PHASE-CUT DIMMERS & DIMMING RANGE

120Vac Dimmers

Mfg.	Model	Mfg.	Model	Mfg.	Model
Lutron	S-603PG	Lutron	DVELV-303P	Lutron	CT-103P
Leviton	IPI06-1LZ	Lutron	SELV-300P	Cooper	SLC03P
Leviton	6631-2	Leviton	6683-IW	Leviton	IPE04
Lutron	DVCL-153P	Leviton	6161	Lutron	MAELV-600
Lutron	DV-600P	Leviton	6633-P	Lutron	FAELV-500
Lutron	TGCL-153P	Lutron	TG-600P	Lightolier	ZP260QEW
Lutron	S-600P	Cooper	DLC03P	Cooper	DAL06P
Leviton	VPE06	Lutron	LG-600P		



Warning

- Carefully read these instructions before assembling the Fixture, to assure its correct and safe working performance.
- Keep these instructions in a safe place for future consultation; contact your distributor in the event of malfunction.
- Do not modify the Fixture. Modifying the Fixture in any way invalidates the guarantee of conformity with standards and directives in force and it could make the actual Fixture hazardous. Reggiani will not be responsible for any damage or injury due through misuse of product.
- The Fixture must be installed by quali ed experts in accordance with industry bes ptractice.
- System is intended for installation in accordance with National Electric Code, and local regulations. Consult with local inspector to assure compliance.
- As a safety guarantee, any components damaged while the Fixture is operating must be replaced with the same components before it is used again.
- Turn o power at main switch before installing or modifying the system to prevent the risk of re, electrical shock and injuries to persons.
- Warning: [Risk of re] do not install insulation within 3 inches around xture, or junction box, or in a manner to entrap heat.

General Features of Non-Electrical Open New construction housing

- Reggiani offers a diverse size selection of Non-Electrical New construction housing that vary in size depending on the Fixtured imensions and Fixture wattage.
- Non-Electrical New construction housing are provided with two hanger bars that mount on the sides with two screws (provided). Hanger bars expand from 16" to 24". Hanger bars accept FB bars, C-Channel, and ½" conduit for mounting.
- Non-Electrical New construction housing are constructed from galvanized steel.

Non-Electrical New construction housing Installation

- Unpack New construction housing, Hanger bars (Typ. 2) and hanger bars screws (Typ. 4) from enclosed packaging. [Fig. 1]
- Identify hanger bar mounting holes on all sides of the Non-Electrical New construction housing. [Fig. 2]
- Identify the orientation of the Non-Electrical New construction housing based on any interference during mounting. [Fig. 3]
- Secure hanger bars to Non-Electrical New construction housing by rst ensuring the hanger bar securement tab are oriented towards the bottom of the Non-Electrical New construction housing. [Fig. 4]
- Secure hanger bars with provided hardware. [Fig. 5]
- Extend hanger bars between joists. Hanger bars can be adjusted to accommodate joist centers between 16" to 24". Hammer in securement tabs into ceiling joist. [Fig. 6]
- Permanently secure hanger bars to joist with hardware provided by others. [Fig. 7]
- Extend wiring from output of Remote driver to New construction housing. Leave enough slack so the wiring extendst hrough the housing and out of the ceiling cut-out plane by 6" to facilitate servicing of the light engine.



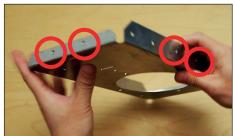




Fig. 1

Fig. 2

Fig. 3

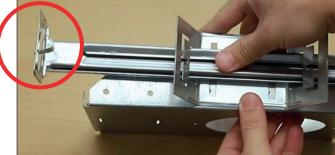




Fig. 4

Fig. 5



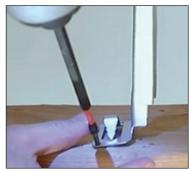


Fig. 6 Fig. 7



Warning

- Carefully read these instructions before assembling the Fixture, to assure its correct and safe working performance.
- Keep these instructions in a safe place for future consultation; contact your distributor in the event of malfunction.
- Do not modify the Fixture. Modifying the Fixture in any way invalidates the guarantee of conformity with standards and directives in force and it could make the actual Fixture hazardous. Reggiani will not be responsible for any damage or injury due through misuse of product.
- The Fixture must be installed by qualified experts in accordance with industry best practice.
- System is intended for installation in accordance with National Electric Code, and local regulations. Consult with local inspector to assure compliance.
- As a safety guarantee, any components damaged while the Fixture is operating must be replaced with the same components before it is used again.
- Turn off power at main switch before installing or modifying the system to prevent the risk of fire, electrical shock and injuries to persons.
- · Warning: [Risk of fire] do not install insulation within 3 inches around fixture, or junction box, or in a manner to entrap heat.

Wiring

- The driver supplied with the Fixture is specially designed to maximize performance. Unless the Reggiani engineering department issues specific authorization, use of other drivers is prohibited.
- For non-track Fixtures, Fixture is provided with either remote driver, semi-remote driver, or integral driver. Note: Before turning on mains power, confirm LED wires are properly connected to driver output wires.
- For remote and semi-remote driver, the correct wiring sequence is to wire the LED to the driver output, then connect the driver input to mains power. Note: if semi-remote option is available, then driver is serviceable through Fixture aperture.
- For integral driver, the wiring between LED and driver output is prewired. The correct wiring sequence is to wire the driver input to mains power.

Dimming

- · Below is an overview of the different dimming options Reggiani offers, consult Factory for availability.
- Phase Cut [Reverse and Forward]

The luminous flux is dimmed by varying the AC power delivered to the Fixture via Reverse [ELV] and Forward [Triac] phase configurations.

Analogue [0-10V]


The luminous flux is dimmed by varying a 0-10V direct voltage signal through polarity sensitive purple [dim +] and grey [dim -] wiring.

Emergency Lighting

The Fixture can be converted into emergency lighting by wiring to an emergency lighting inverter.

Remote/Semi-Remote Driver Installation

- · Note:
- Remote/Semi-Remote driver must be installed in an accessible serviceable location with maximum ambient temperature of 100 degrees Fahrenheit (37 degree Celsius).
- Remote/Semi-Remote driver box requires 3" clearance from any insulation.
- The LED drivers are secured in a metal enclosure with standard ½" trade size knock-outs.
- From the specification sheet or Fixture cutsheet determine the wiring method, series or parallel, and the number of Fixtures per driver for the model.
- For multiple Fixtures powered to one driver via parallel circuit, connect all positive low voltage wires [fixtures and driver] to a common splice point and same with the negative.
- For multiple Fixtures powered to one driver via series circuit, each Fixture is to connect to the next by alternating polarity. See example wiring below.

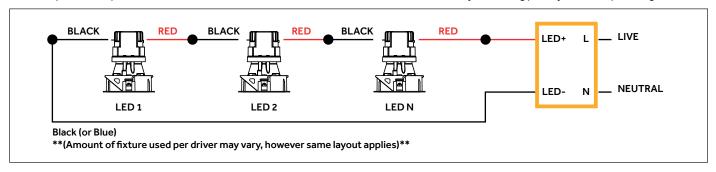

• Maximum driver distance from Remote/Semi-Remote driver to Fixture is as follows:

Maximum Driver Distance

Wire Gauge	Distance [ft]			
18GA	60'			
16GA	80'			
14GA	100'			

- Identify Remote/Semi-Remote driver and Z Brackets. [Fig. 6]
- Bring building mains power wires to Remote/Semi-Remote driver box through side knock-out. [Fig. 7]
- Remove Remote/Semi-Remote driver box cover, exposing driver input and output wires. [Fig. 8]
- · Connect building wires to LED driver input wires as such: white to white [neutral], black to black [hot], and green to green/bare [ground]. [Fig. 9]
- Through appropriate methods, extend Remote/Semi-Remote driver output wires to Fixture ceiling junction box in preparation to connect with Fixture LED (+) and LED (-) wires.
- Secure Remote/Semi-Remote driver on flat surface via provided Z Brackets (Typ. 2) [Fig. 6]. Depending on field condition, use appropriate screws to secure Z Brackets on driver box and flat surface. [Fig. 10]
- Alternately, the Remote/Semi-Remote driver metal enclosure may be secured onto surface using hardware by others. First remove driver enclosure cover plate, fasten sheet metal screw through metal enclosure and onto surface, and then reattach driver enclosure cover plate.









Fig. 8







Fig. 9

Fig. 10

Ceiling Preparation for Fixture

- Use the following chart to appropriately cut out the hole in the ceiling for the Fixture.
- Tolerance: ± 1/16 inch

Table A: Ceiling Cut Out Dimensions (inches)

14515711 45111119 444 444 2111161161616161						
Fixture Model	XS	S	M	L	XL	
Adjustable - Round Flush	N/A	2.30	3.6	4.80	6.50	
Adjustable - Round Cone	N/A	N/A	3.6	4.80	6.50	
Adjustable - Square Flush	N/A	2.30 x 2.30	3.60 x 3.60	4.80 x 4.80	6.50 x 6.50	
Adjustable - Square Pyramid	N/A	N/A	3.60 x 3.60	4.80 x 4.80	6.50 x 6.50	
Fixed - Round	1.50	2.30	3.6	4.80	6.50	
Fixed - Square	1.50 x 1.50	2.30 x 2.30	3.60 x 3.60	4.80 x 4.80	6.50 x 6.50	
Fixed - Round w/ Dome	1.50	2.30	3.6	4.80	N/A	
Fixed - Round w/ Cylinder	1.50	2.30	3.6	4.80	N/A	
Wall Washer - Round	N/A	2.30	3.6	4.80	6.50	
Wall Washer - Round Drop	N/A	2.30	3.6	4.80	6.50	
Wall Washer - Square	N/A	2.30 x 2.30	3.60 x 3.60	4.80 x 4.80	6.50 x 6.50	
Wall Washer - Square Drop	N/A	2.30 x 2.30	3.60 x 3.60	4.80 x 4.80	6.50 6.50	

• Depending on the Mood shape and size, there may be different mounting spring clips. Refer to the following Spring Clip Table before Fixture installation.

Fixture Installation: Trimless Version

- Adjustable (S, M, L, XL). Fixed (XS, S, M, L, XL). Wall Washer (S, M, L, XL)
- Note: Installation of Remote/Semi-Remote driver and extended low voltage wiring must be completed prior to Fixture installation.
- Make the appropriately sized cut out hole in the ceiling, see Table A: Ceiling Cut Out Dimensions.
- Connect previously extended Remote/Semi-Remote driver output wires to Fixture LED (+) (Red) and LED (-) (Black) wires.
- Insert Fixture into ceiling cut out and use provided screws to fix in place.
- Finish with plaster, smoothing it evenly around the mud flange.

Fixture Installation: Trim Version


- Adjustable (S, M, L, XL). Fixed (XS, S, M). Wall Washer (S, M, L, XL)
 - Note: Fixture mounting clips accommodates 5/8-inch ceiling thickness. Installation of Remote/Semi-Remote driver and extended low voltage wiring must be completed prior to Fixture installation.
- Make the appropriately sized cut out hole in the ceiling, see Table A: Ceiling Cut Out Dimensions.
- Connect previously extended Remote/Semi-Remote driver output wires to Fixture LED (+) (Red) and LED (-) (Black) wires.
- Secure mounting spring clips (see Table B: Spring Clip Table) and then push Fixture into the ceiling cut-out.


• Fixed (L, XL)


- Note: All Fixture mounting clips accommodates a minimum of 5/8-inch ceiling thickness. Installation of Remote/Semi-Remote driver and extended low voltage wiring must be completed prior to Fixture installation.
- Make the appropriately sized cut out hole in the ceiling, see Table A: Ceiling Cut Out Dimensions.
- Connect previously extended Remote/Semi-Remote driver output wires to Fixture LED (+) (Red) and LED (-) (Black) wires.
- Remove Fixture faceplate.
- Secure Fixture in place by tightening screw in wing.
- Reinstall Fixture faceplate.





TRIM INSTALLATION (Mood Pro Adjustable, Fixed, Wall Washer)

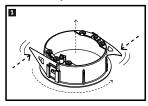


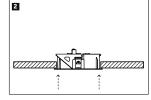


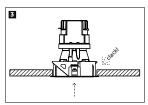


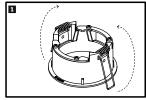


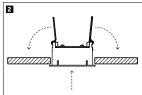


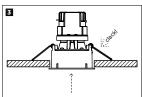


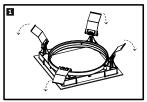


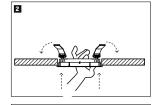


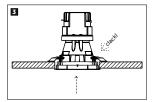


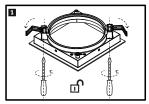


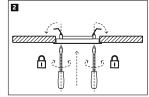


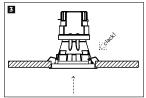

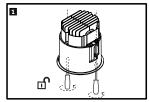

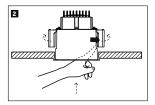


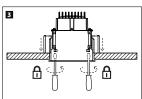

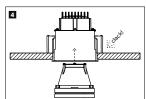


TRIMLESS INSTALLATION (Mood Pro Adjustable, Fixed, Wall Washer)




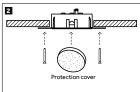






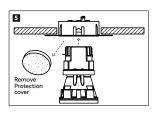

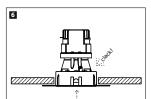

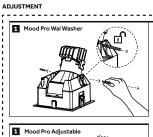


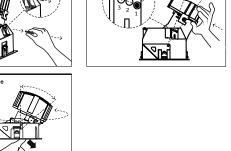


Fig. 3

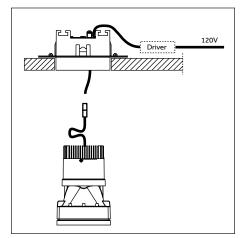

Installation Guide Mood Pro



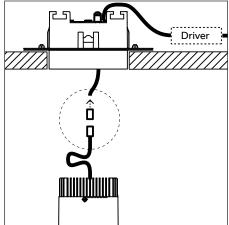


Fig. 2

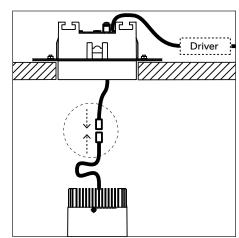


Fig. 1

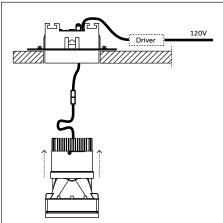


Fig. 4